

### IN THE BOX

Ventus LC300 4G LTE Router  
Ventus antenna  
Ethernet cable  
Power supply



1x Ventus antenna



1x Ethernet cable





1x Power supply




**QUICK TIP:** The LC300 has a powerful magnetic base - enabling you to affix it, vertically or horizontally, to any magnetic surface.

- 1 Plug Ethernet cable into LAN port on Ventus router.


Plug the other end of the Ethernet cable into the customer device.

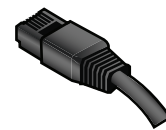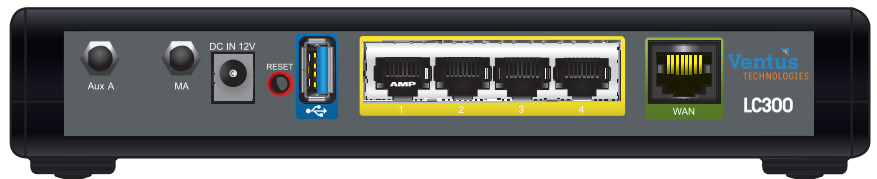

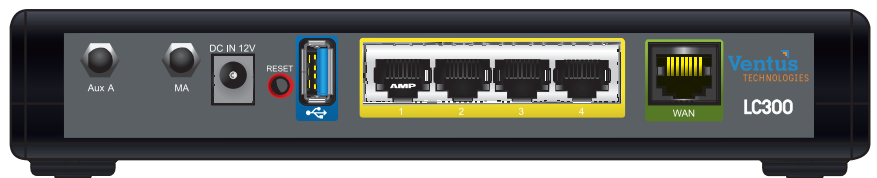

- 2 Securely fasten the antenna via both TNC connectors to MA and AuxA ports.

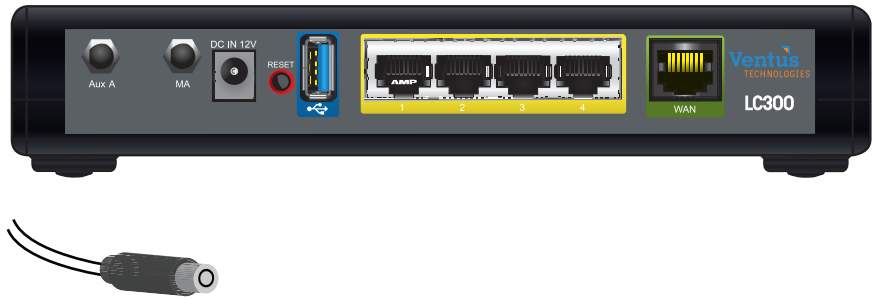

**3** Plug in power adapter.





 QUICK TIP: To **soft reset** your router, depress the small button to the left of the power input with a pin or paper clip while the unit is powered on.

 QUICK TIP: To **completely power down** the router, first unplug the unit from electrical outlet and then depress the small button to the left of power input with a pin or paper clip.

**4** Wait for CELL LINK light to persistently turn GREEN. This may take up to 5 minutes.



 QUICK TIP: Use the signal indicator lights  on the front to determine the best placement for the antenna.

For support please call  
Ventus Technical Support Center at 1-800-620-3586