
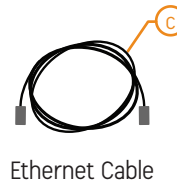
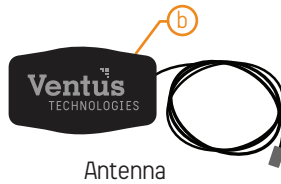


INCLUDED IN THE BOX


- Ventus Technologies V2000X4I 4G LTE Router (a)
- Antenna (b)
- Ethernet Cable (c)
- AC Power Supply (d)

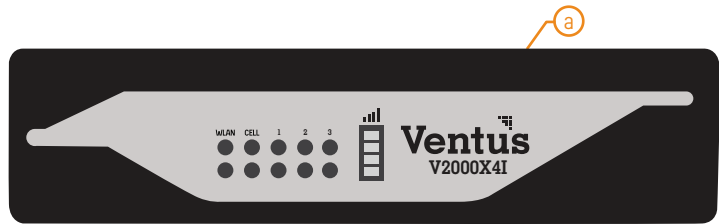


QUICK TIP: The V2000X4I has a powerful magnetic base - enabling you to affix it, vertically or horizontally, to any magnetic surface.

- 1** Plug Ethernet cable into LAN port on Ventus router.


Plug the other end of the ethernet cable into the customer device.

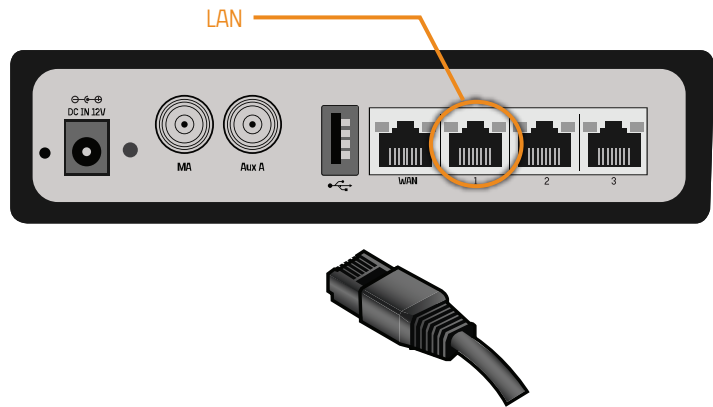

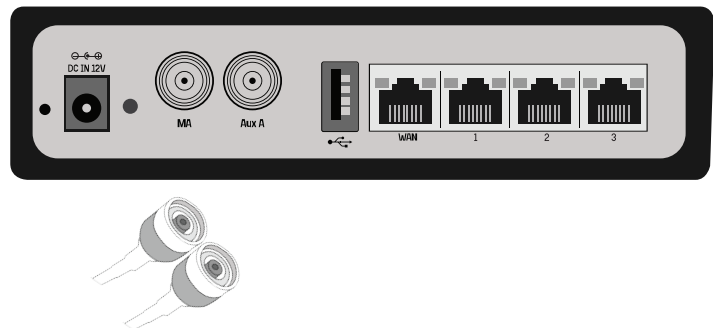

- 2** Securely fasten the antenna via both TNC connectors to MA and AuxA ports.

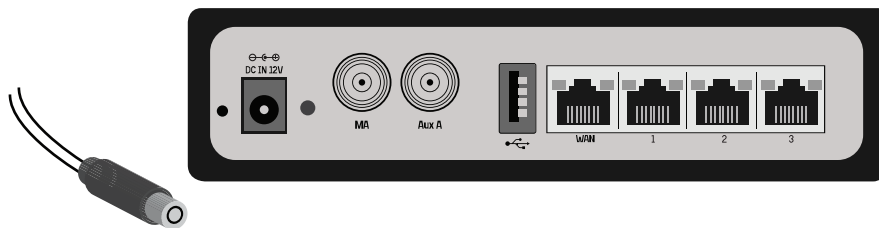


3 Plug in power adapter.





 QUICK TIP: To **soft reset** your router, depress the small button to the left of the power input with a pin or paper clip while the unit is powered on.

 QUICK TIP: To **completely power down** the router, first unplug the unit from electrical outlet and then depress the small button to the left of power input with a pin or paper clip.

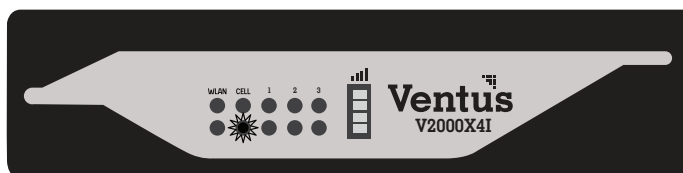4 Wait for CELL LINK light to persistently turn GREEN.
This may take up to 5 minutes.



 QUICK TIP: Use the signal indicator lights  on the front to determine the best placement for the antenna.

For Ventus Technical Support Center call 1-800-620-3586